 



# 使用说明书

# User's guide

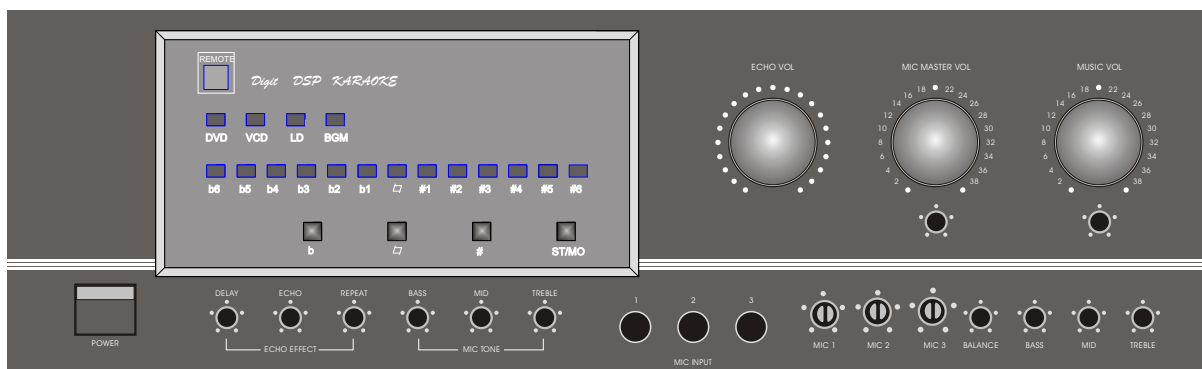

# SOUND BY PERFECTION
 
## NAMES OF PARTS AND THEIR FUNCTIONS (FRONT PANEL)

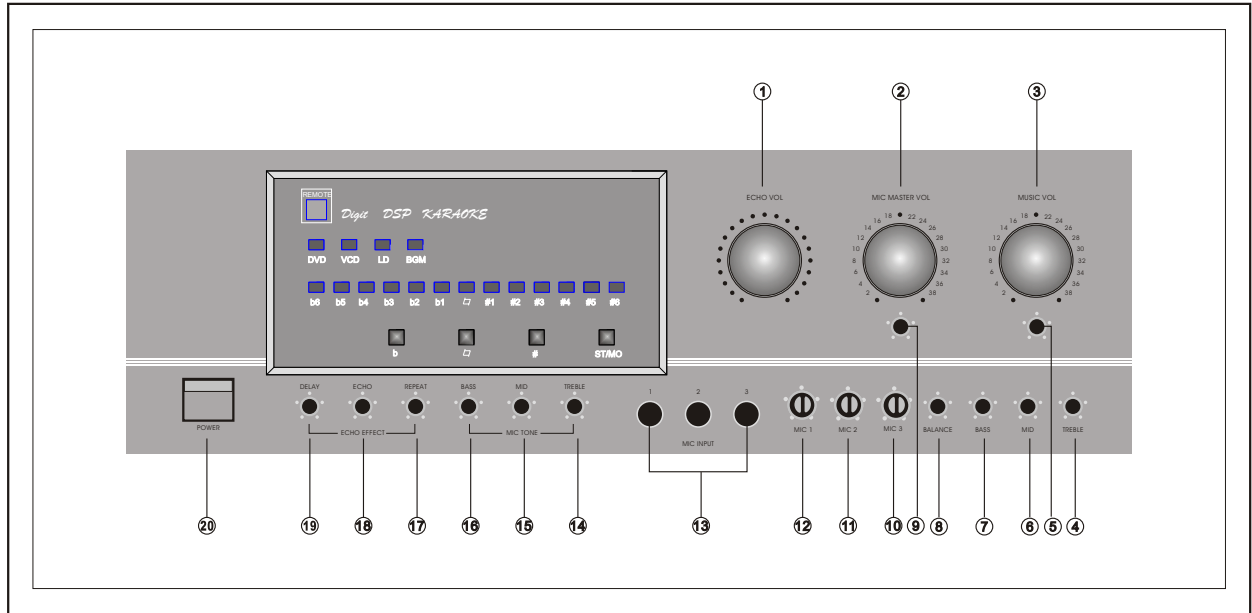


- ① ECHO's numeral reverberation strength is adjusted controlling ECHO's knob can be adjusted the echo intensity effect of microphone, and strengthens toward right side effect , and weakens toward leftside effect.
- ② Total volume of MIC's VOLUME's microphone is controlled This knob can be adjusted all microphone volume ,toward the fight side for strengthening volume, toward a left side for reducing volume.
- ③ Total volume of MISIC's VOLUME's music is controlled
- ④ TREBLE'smusic high-pitched voice is controlled the knob This knob can be adjusted the volume to import the audio frequency music. Toward the right side for strengthening volume. Toward a left sidefor reducing volume. Part of clockwise rotation music is promoted step by step.
- ⑤ The knob controlled in the music volume locking
- ⑥ The knob controlled in sound tone quality in MID's music The ability is answered by the middle sound of this to control knob available comes to strengthen or weakens that the music accompanies ministry sake. The middle sound part of clockwise rotation music is promoted step by step.
- ⑦ The knob controlled in BASS's music bass tone quality this to conti-nuerol knob available comes to strengthen or weakens that the music the accompanies bass or highpitched voice answer ability of ministry sake. The bass part of clockwise rotation music promoted step by step.
- ⑧ BALANCE's music balance control knob
- ⑨ The knob controlled in the microphone volume locking

- ⑩ 3 microphone volume MIC is controlled
- ⑪ 2 microphone volume MIC is controlled
- ⑫ 1 microphone volume MIC is controlled
- ⑬ MIC 1's MIC 2's MIC 3's microphone is imported the hub
- ⑭ TREBLE's microphone high-pitched voice volume controls the knob  
This a controlled the available high-pitched voice answer ability to come to strengthen or weakens microphone volume ministry sake of knob. The high-pitched voice part of clockwise rotation microphone is promoted step by step
- ⑮ Sound volume controls the knob in MIC's microphone. This is controlled the available middle sound that comes to strengthen or weakens microphone volume ministry sake of knob and answers the ability. The middle sound part of clockwise rotation microphone is promoted step by step
- ⑯ BASS's microphone bass volume controls the knob . This is controlled the available bass answer ability to come to strengthen or weakens microphone volume ministry sake of knob The bass part of clock wise rotation microphone is promoted step by step
- ⑰ Microphone echo of REPEAT's repeats the times and controls knob REPEAT's knob and can adjust the echo and repeat the times, and it is more to repeat the times toward the echo in right side and it is fewer To repeat the times toward the echo on left side
- ⑱ ECHO's microphone mixes sound degree of depth controlling knob ECHO's knob and can adjust the microphone and mix the sound degree of depth
- ⑲ Microphone echo of DELAY's postpones time and controls the knob DELAY's knob can be adjusted echo delay time ,and it is longer to lengthen time toward the echo on right side, and it is shorter to lengthen time toward the echo on left side
- ⑳ POWER's Power-fail  
According to making the power supply open during this key, Approximate number second later emperor has export by the machine, again according to once closing down the power supply.
- ㉑ ST/MO  
stereo and monophony control

## CAUTIONS

 - **Pay attention to have good ventilation**  
Please do not place the set in a location where it will be exposed to direct sunlight or near a heating appliance.
- **Caution on humidity, water.**  
Do not place the set in a location where is humidity, and flower vases or other items containing water should not be placed on top of the set.
- **Power supply**  
After fixing properly, please make sure power is correspond with the set requirement before with the set requirement before connecting AC power. Don't connect wrong to prevent from damaging the set. Please try to pull out the plug if you are not at home or long time, connect it again after back home.
- **Ventilation hole**  
When the ventilation hole it can cause the set damage, the ventilation holes are very important for heat radiation for inside. If anything is wrong please turn off first, after check then use it again.
- **Do not allow outside matter into the set**  
Especially be careful of needle iron and coins getting into the set.
- **Do not open the cover**  
The set is electronic product, please don't open the cover to avoid dangerous of damaging or electric shock unless you are a professional technician. If any thing is wrong please pull out the plug first and contact with the technician.
- **Appearance cleaning**  
Avoid the use of pesticides as well as wiping the case with benzine, thinner or other solvents since they may cause change in quality or color. Use a soft cloth wiping way dirt.

## NAMES OF PARTS AND THEIR FUNCTIONS (FRONT PANEL)

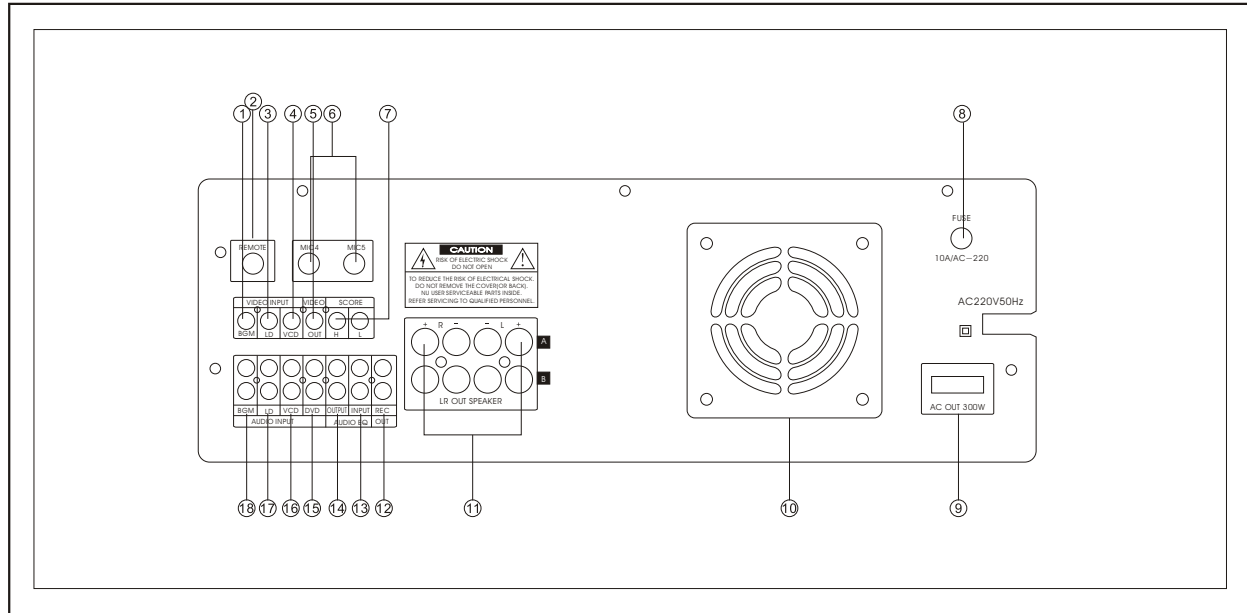

- ① LD's shadow sound CD machine video input end VIDEO's INPUT's video output end used for with LD's shadow sound VD machine is linked together to be met
- ② REMOTE's system thread accuse is imported with S's end VIDEO's INPUT's video output end that
- ③ DVD's shadow sound CD machine video input end is used for with DVD's shadow sound CD machine is linked together to be met
- ④ VCD's shadow sound CD machine video input end VIDEO's INPUT's video output end used for with VCD's shadow sound CD machine is linked together to be met
- ⑤ VIDEO's OUT's shadow sound CD machine video output end Used for that rather than VIDEO's INPUT's video output end of its shadow sound CD machine is linked together to meet
- ⑥ MIC's INPUT's 4/5's microphone input header MIC4's MIC5's microphone input header and MIC2's MIC3's volume synchronizing hold control
- ⑦ Interface end is specially given a mark by the machine that the song is ordered by SCORE OUT  
Can be with the microphone signal by way of the young direct output of the edit's time to doon the song machine, and the outfit has two giving a mark interface , Hs's (dividing gives a mark the interface ) and the ( interface is given a mark by the low branch ), and hanging down minute to give a mark , the interface is stricter when giving a mark than Gao Fen gives a mark the interface
- ⑧ Insurance of FUSW 10VA's seat  
Insurance of AC 220~240V 10A's seat.



- ④ AC's OUT's 300W's power supply is send out the supply seat  
AC's OUT's 300W's. power supply is send out the supply seat  
and is used for supplying not giving other sound equipment to use  
through the power supply within this mechanical and electrical  
source switch control 300W
- ⑩ The electric fan dissipates heat
- ⑪ Brass-wind instruments enclosure coil out  
Used for linking usefulness, and can be linked with two teams of  
enclosures with the enclosure
- ⑫ REC's OUT's sound recording coil out  
The signal used for sending out as a result of microphone and  
music mixing behind the sound is send out through this end, and  
supplies the usefulness of the sound recording seat or the tape  
recorder sound recording
- ⑬ AUDIO's OUT2's audio frequency coil out
- ⑭ AUDIO's OUT1's audio frequency coil out
- ⑮ AUX reserves, and the audio frequency input header is young  
Used for that rather than the audio frequency of its shadow sound  
equipment coil out is linked together to meet
- ⑯ VCD's shadow sound CD machine audio frequency input header  
The audio frequency used for with VCD's shadow sound CD  
machine AUDIO OUT coil out is linked together to meet
- ⑰ DVD's shadow sound CD machine audio frequency input header  
The audio frequency used for with DVD's shadow sound CD machine  
AUDIO OUT coil out is linked together to meet
- ⑱ LD's shadow sound CD machine audio frequency input header  
The audio frequency used for with LD's shadow sound CD machine  
AUDIO OUT coil out is linked together to meet

## STANDARD SPECIFICATION

### OUTPUT POWER:

TS-150D	150W+150W(80hm)
TS-200D	200W+200W(80hm)
TS-300D	300W+300W(80hm)

### INPUT SENSITIVITY/IMPEDANCE

MIC	5mv-100mv/600ohm
CIRCUITRY	250mv-47kohm

### MUSIC CONTROL CHARACTERISTIC

#### MUSIC

Bass in music	±10dB
Mid in music	±10dB
Treble of music	±10dB

#### Mic

Bass in music	±6dB
Mid in music	±6dB
Treble of music	±6dB

### OUTPUT SENS ITIVITY/IMPEDANCE

 
Audio frequency	0.707V/1Kohm
-----------------	--------------

Protect short circuit from	4-16ohm
Impedance	8ohm

POWER VOLTAGE	AC 180V-240V-50Hz
POWER CONSUMPTION	AC 220V-50Hz
POWER SOCKET	AC 220V/100W
OUTSIDE DIMENSION	495x426x190(MM)

**Note: Design and specifications are subject to change for improvement without prior notice.**

## 变调及功能设定说明

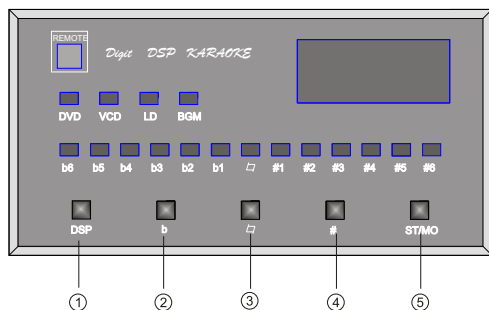

- ① 降调选择开关
- ② 原调选择开关
- ③ 升调选择开关
- ④ 0k单声道与立体声选择开关

### 特点

营业场所与KTV包厢内为方便业主操控和保护产品寿命以防止回授及音量过大限制，保护扬声器不易损坏，每台机器出厂都有自动音量设定功能，可在每个包厢或连接点歌机发挥强大功能。

### 出厂设定

首先按住 ③⑤ 键，然后再开机，待面板LED显示完毕，音乐麦与克风音量旋钮上的发光管闪烁8次，音乐与麦克风音量旋钮自动回转，放开按键即可。

### 取消自动设定

 
首先按住 ④⑤ 键，然后再开机，待面板LED显示完毕，音乐与麦克风音量旋钮上的发光管闪烁8次，音乐与麦克风音量旋钮自动回转，放开按键即可。

调整开机与遥控器可调整最大音量设定（每次开机时音量自动调至最小，然后加大到预设音量，操作方便安全）

首先按住 ③④ 键，然后再开机，待面板LED显示完毕，音乐与麦克风音量旋钮上的发光管闪烁8次，音乐与麦克风音量旋钮自动回转后放开按键，音乐与麦克风音量旋钮自动回零后，音乐旋钮会闪烁并移至出厂设定位置，此时可按 ② 键与 ④ 键调整所欲新设定值后按下⑤ 键，此时音乐旋钮会旋转移动，可按 ② 键与④ 键调整设定欲使遥控器上可调整音乐的最大值后，再按一下⑤ 键，音乐旋钮回旋转归零。


音乐旋钮自动回零后，麦克风音量旋钮会闪烁并移至出厂设定位置，此时可按 ②键与④ 键调整所欲新设定值后按下⑤ 键，此时麦克风音量旋钮会旋转移动，可按 ②键与④ 键调整设定欲使遥控器上可调整麦克风音量的最大值后，再按一下⑤ 键，麦克风音量旋钮回旋转归零后，音乐与麦克风音量旋钮自动旋转到最新设定位置，设定完毕。

## 遥控器操作说明

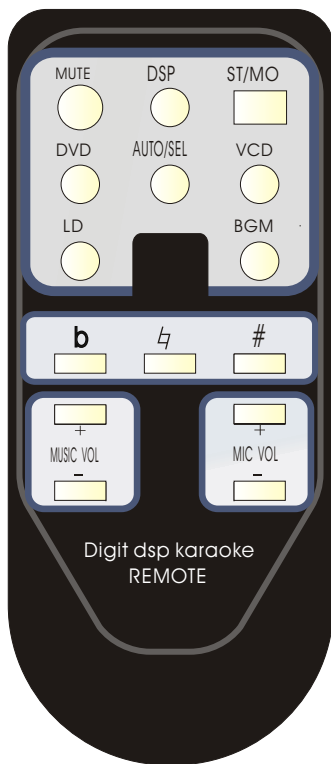

- MUTE 静音开关
- DSP DSP声场设定按键按此键可进入不同的声场设定环境
- ST/MO OK单声道与立体声选择开关
- AUTO/SEL 输入信号手动与自动选择键
- DVD DVD输入信号选择键（当选择手动时有效）
- LD LD输入信号选择键（当选择手动时有效）
- VCD VCD输入信号选择键（当选择手动时有效）
- BGM BGM输入信号选择键（当选择手动时有效）
- b** 降调选择开关
- 4** 原调选择开关
- #** 升调选择开关
- MUSIC VOL 音乐声音大小调节
- MIC VOL 麦克风声音大小调节

## 面板名称及功能说明

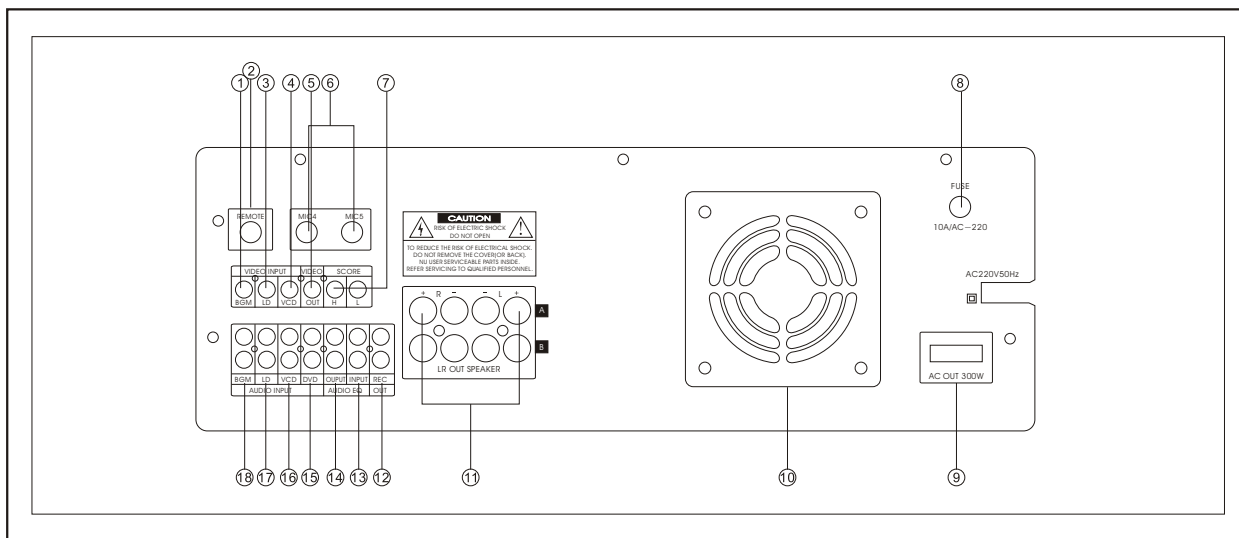 

- ① BGM影音光碟机视频输出端子  
用来与BGM影音光碟机VIDEO OUTPUT视频输出端子相连接。
- ② REMOTE系统线控输入用S端子
- ③ LD影音光碟机视频输入端子  
用来与LD影音光碟机的VIDEO OUTPUT视频输出端子相连接。
- ④ VCD影音光碟机视频输入端子  
用来与VCD影音光碟机VIDEO OUTPUT视频输出端子相连接。

- ⑤ VIDEO OUT影音光碟机视频输出端子  
用来与电视机或其它的视频输入端子相连接。
- ⑥ MIC INPUT4/5麦克风输入端子  
MIC4 MIC5麦克风输入端子与MIC1 MIC2音量同步控制。
- ⑦ SCORE OUT点歌机专用评分接口端子  
可将麦克风信号通过此端子直接输出到点歌机上，并配备有两个评分接口-H（高分评分接口）和-L（低分评分接口），低分评分接口比高分评分接口在评分时更加严格。
- ⑧ FUSE 10VA保险座  
AC 220-240V 10A保险座。

- ⑨

AC OUT 300W电源输入供应座

AC OUT 300W电源输出供应座是用来供应未经本机电源开关控制300W以内的电源给其它音响器材用。
- ⑩

散热风扇
- ⑪

喇叭音箱输出端子

用来与音箱连接用，可与两组音箱连接。
- ⑫

REC OUT录音输出端子

用来输出经过麦克风与音乐混音后的信号经此端子输出，供录音座或录音机录音之用。
- ⑬

INPUT音频输入端子、外接均衡器（效果器）输出
- ⑭

OUTPUT音频输出端子、外接均衡器（效果器）输入
- ⑮

DVD备用音频输入端子

用来与其它影音器材之音频输出端子相连接。
- ⑯

VCD影音光碟机音频输入端子

用来与VCD影音光碟机的AUDIO OUT音频输出端子相连接。
- ⑰

LD影音光碟机音频输入端子

用来与LD影音光碟机的AUDIO OUT音频输出端子相连接。
- ⑱


BGM影音光碟机音频输入端子

用来与BGM影音光碟机的AUDIO OUT音频输出端子相连接。

标准规格	
输出功率放大器RMS	
TS-150D	150W+150W (80hm)
TS-200D	200W+200W (80hm)
TS-300D	300W+300W (80hm)
频率响应	35HZ-20KHZ ±1dB
输入灵敏度/阻抗	
话筒	5mv-100mv/600ohm
线路	250mv-47kohm
音调控制	
音乐	
低频（增加/衰减）	±10dB
中频（增加/衰减）	±10dB
高频（增加/衰减）	±10dB
话筒	
低频（增加/衰减）	±6dB
中频（增加/衰减）	±6dB
高频（增加/衰减）	±6dB
输出灵敏度/阻抗	
音频	0.707V/1Kohm
输出阻抗	
带短路保护功能	4-16ohm
推荐阻抗	8ohm
电源供应	
标准电源	AC 180V-240V-50Hz
交流电源输出插座	AC 220V-50Hz
包装尺寸	AC 220V/100W
	495x426x190 (MM)

规格如因性能及设计上改进而变更规格时，恕不另行通知

# 面板名称及功能说明

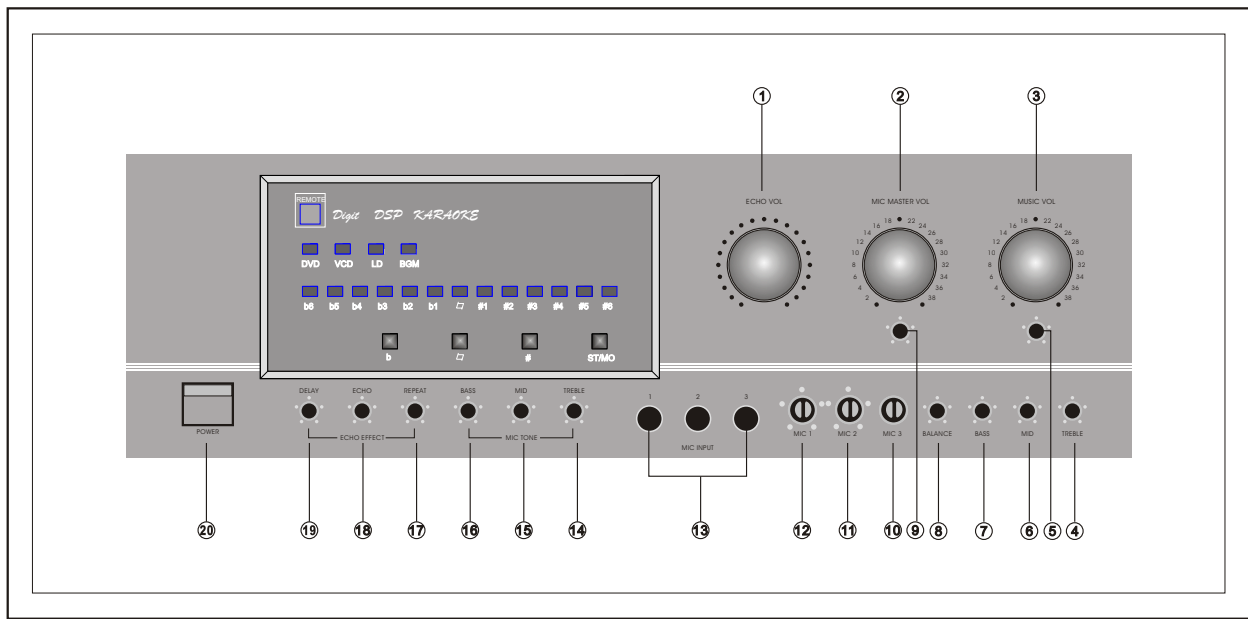 

- ① ECHO数码混响强度调整控制  
ECHO旋钮可调整麦克风的回音强度效果，往右效果增强，往左效果减弱。
- ② MIC VOLUME麦克风总音量控制  
此旋钮可调整所有麦克风音量，往右为增强音量，往左为降低音量。
- ③ MUSIC VOLUME音乐总音量控制  
此旋钮可调整输入音频音乐的音量，往右为增强音量，往左为降低音量。
- ④ TREBLE音乐高音控制旋钮  
这个控制旋钮可用来加强或减弱音乐伴奏部份高音响应能力。顺时针旋转音乐的高音部分逐步提升。
- ⑤ 音乐音量锁定控制旋钮
- ⑥ MID音乐中音音质控制旋钮  
这个控制旋钮可用来加强或减弱音乐伴奏部份的中音响应能力。顺时针旋转，音乐的中音部分逐步提升。
- ⑦ BASS音乐低音音质控制旋钮  
这个控制旋钮可用来加强或减弱音乐伴奏部份的低音响应能力。顺时针旋转音乐的低音部分逐步提升。
- ⑧ BALANCE音乐平衡控制旋钮
- ⑨ 麦克风音量锁定控制旋钮

**⑩ MIC3麦克风音量控制****⑪ MIC2麦克风音量控制****⑫ MIC1麦克风音量控制****⑬ MIC1 MIC2 MIC3麦克风输入插座****⑭ TREBLE麦克风高音音量控制旋钮**

这个控制旋钮可用来加强或减弱麦克风音量部份的高音响应能力。顺时针旋转, 麦克风的高音部分逐步提升。

**⑮ MID麦克风中音音量控制旋钮**

这个控制旋钮可用来加强或减弱麦克风音量部份的中音响应能力。顺时针旋转, 麦克风中音部分逐步提升。

**⑯ BASS麦克风低音音量控制旋钮**

这个控制旋钮可用来加强或减弱麦克风音量部份的低音响应能力。顺时针旋转, 麦克风的低音部分逐步提升。

**⑰ REPEAT麦克风回音重复次数控制旋钮**

REPEAT旋钮可计整回音重复次数, 往右回音重复次数愈多, 往左回音重复次数愈少。

**⑱ ECHO麦克风混音深度控制旋钮**

ECHO旋钮可调整麦克风混音深度。

**⑲ DELAY麦克风回音延迟时间控制旋钮**

DELAY旋钮可调整回音延长时间, 往右回音延长时间愈长, 往左回音延长时间愈短。

**⑳ POWER电源开关**

按这个按键时可使电源开启, 约数秒后主机才有输出, 再按一次可关闭电源。

**㉑ ST/MO混响立体声/单声道转换****使用时注意事项****● 注意高温散热**

装置请避免摆设于阳光直接照射的地方, 更不可以与易产生高温之电器产品摆在一起。摆设于密闭式客厅、房间时, 须更加留意通风散热问题, 通风散热孔的方向应置于空气流通的位置。

**● 湿气、水份问题**

请尽量避免装置于湿气重、水份多的地方。本机盖上请勿放置盛水之茶杯或器皿以及有水之花瓶。

**● 确认供应电源**

装置妥当后, 欲接上AC(交流)电源时, 请确认电源是否与本机规格符合, 不可以接错以免损及机器。长时间外出或旅游不在家时, 请将电源插头拉下。

**● 通风孔问题**

散热通风孔遮蔽时, 是引起主机故障原因之一。通风孔为主机散热用, 非常重要, 若发觉异常现象(产生高温)时, 请先关机, 待查明后再使用。

**● 禁止放入其它物品**

绝对禁止放入针、细铁硬币等其它导电性质之物体, 以免损坏本机。

**● 勿擅自拆机盖**

 
本机为电化制品, 非专业技术人员, 勿擅自打开机盖检视, 避免破坏或遭电击之危险。

**● 外观擦拭整理**

外观面板不可喷杀虫剂或其它有机溶剂, 以避免引起变色或变质影响外观。外观擦拭整理时, 以清洁柔软布料, 配合清洁剂使用。(用清洁剂之前须确认不伤及外观面板方可用之)

# 专业卡拉OK功放机

## PROFESSIONAL KARAOKE AMPLIFIER

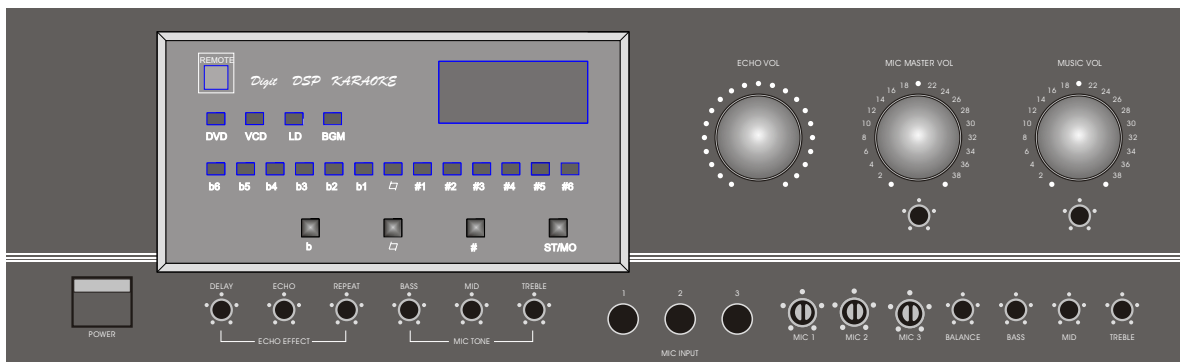

### 特 性 功 能

- 专业级24bit数码变调，数模转换电路，音乐、混响
- 采用DSP处理，人声更加丰富清晰。
- 数字高低音控制。
- 内置卡拉OK自动静噪电路。
- 立体声数字音乐变调。
- 特设点歌机和VOD系统的专用输入通道，让配置更合理，更方便。
- 全新的专业级8种DSP数字模式，单片机控制准确可靠。
- 特有多种音源设备输入接口。
- 独有输入阻抗音源自动选择功能。
- 完善的过载短路保护扬声器功能。
- 智能风扇冷却散热系统，随温度高低改变风扇转速，满足长时间工作。
- 红外无线遥控，针对卡拉OK包房使用，特设第二路输入为优先输入，搭配现行流行KOD/VOD电脑点歌系统。
- 前后板均设有麦克风输入插孔，从整体美观到工程安装都极为方便。
- 整体设计根据卡拉OK包房使用要求，其音量、音色及效果彩隐藏式调节，保证工作可靠。